

# ORI

TEXTILE WALLPAPER

---


These delicate, supple twisted threads are a masterpiece,  
shaped by Japan's unique climate and meticulous craftsmanship.  
Accompanied by the rhythmic hum of the machines,  
each warp and weft thread is woven with  
the dedication and passion of skilled artisans.

Recycled pp.103-108  
Natural Materials pp.109-110  
Fur pp.115-118





This woven wallpaper is made with CAFETEX®, a yarn crafted entirely from recycled paper, making it an eco-friendly choice.

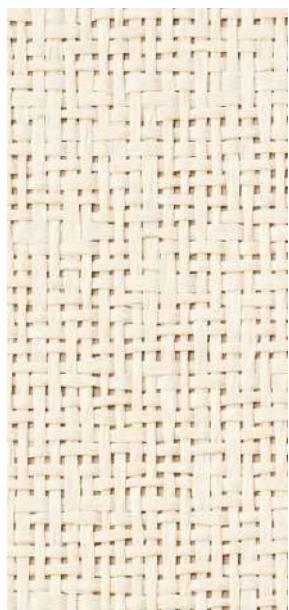

SGM1271

Width 92cm



SGM1272

Width 92cm



SGM1273

Width 92cm



SGM1274

Width 92cm

NEW

NEW

NEW

NEW



CAFETEX® is a paper yarn created by repurposing offcuts from coffee filter production.

These coffee filters are made from high-quality, dye-free, and unprinted pure pulp. Using a specialized technique, the pulp is regenerated into 100% recycled paper yarn. With its unique texture, woven depth, and interplay of different threads, CAFETEX® adds natural beauty and warmth when used as wallpaper.



\*For important guidelines on selection and installation, please refer to the pp.150-159.



A textile wallpaper with a soft texture made from recycled yarn, which uses materials like post-production cotton waste as its raw material.



SGM1275

NEW




SGM1276

NEW




SGM1280 (Seam Treatment)  
Floor Tile: WD-2071

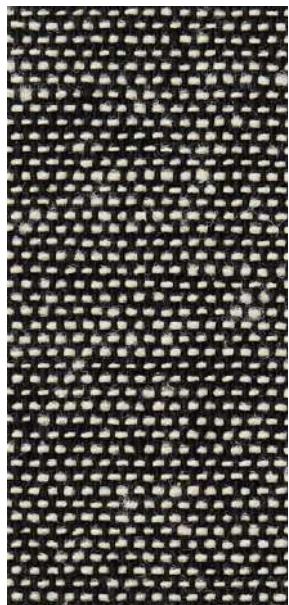


SGM1277

NEW

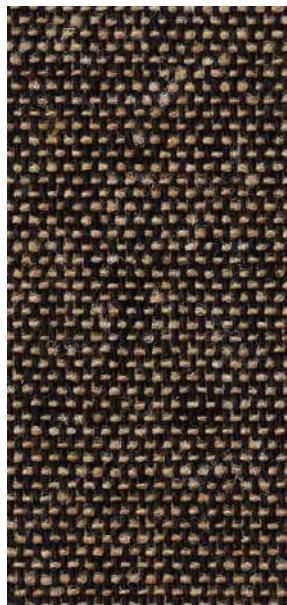

SGM1278

NEW

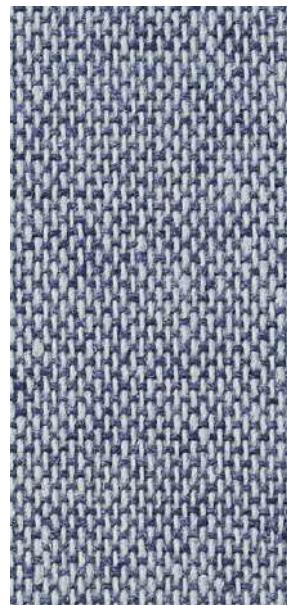

SGM1279

NEW



SGM1280

NEW

### SGM1275 - SGM1280

Width 92cm

Water-repellent for textile

\*For important guidelines on selection and installation, please refer to the pp.150-159.

#### What is Water-repellent for textile?

##### ■ Water repellent finish that prevents from dirts and stains

A fluorine-based water-repellent coating creates a protective resin layer on the surface. This reduces fuzziness while maintaining the natural texture of the woven wallpaper, enhancing its resistance to stains.

##### ■ Easy to Handle During Installation

The water-repellent coating reduces moisture absorption, minimizing curling and shrinkage during installation. Additionally, the edges resist fraying, making this wallpaper easier to work with than conventional woven wallpapers.



Leftover in-house curtain fabric is recycled into new yarn using fiber recycling technology.

The recycled yarn is then woven into a textile, which is used as wallpaper.

### What is Reclaimed Fiber?

Reclaimed fiber is produced by collecting unused fabric, discarded textiles, and fabric scraps, then breaking them down into a fibrous state to create raw material for new yarn. The technique of reclaiming fiber has long been used as a method of recycling. By reusing existing materials, it requires less energy and has a lower environmental impact.



SGM1281

Width 92cm



SGM1282

Width 92cm



SGM1283

Width 92cm



SGM1284

Width 92.5cm ↔ 2.5cm

\*The raw materials and their proportions may vary depending on production timing.  
\*For important guidelines on selection and installation, please refer to the pp.150-159.





**SGM1285**

Width 92cm  
organic cotton



**SGM1285**



**SGM1286**



**SGM1287**



**SGM1288**

\*SGM1285, SGM1286 : Due to using the natural material cottonseed hull may attached.  
\*For important guidelines on selection and installation, please refer to the pp.150-159.

**SGM1287 - SGM1288**

Width 92cm  
Water-repellent for textile  
Jute



SGM1290,1079  
Floor Tile : IS-2070-B

## BISHU

The textiles of "BISHU," produced in Bishu — one of the world's three major wool-producing regions — are highly regarded for their superior quality and advanced craftsmanship. This textile brand is trusted not only in Japan but also by top international luxury brands.




SGM1289

NEW



SGM1290

NEW

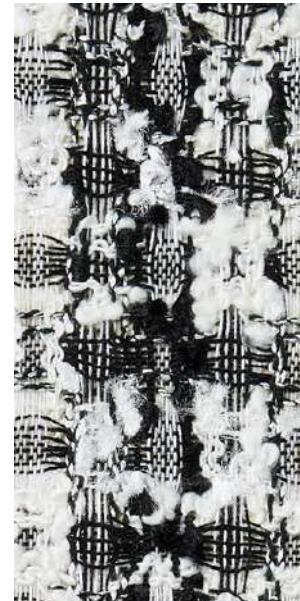

SGM1291

NEW



SGM1291  
Curtain: AC2271

SGM1289 - SGM1291

Width 65cm

BISHU

\*For important guidelines on selection and installation, please refer to the pp.150-159.





SGM1292 - SGM1293

Width 65cm

BISHU

SGM1294 - SGM1295


Width 92cm



SGM1292



SGM1293

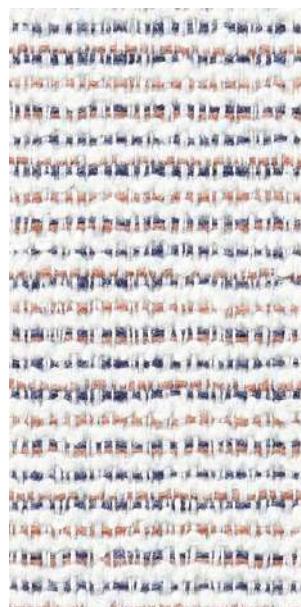

SGM1294



SGM1295

\*SGM1294 and SGM1295 are not BISHU textiles.

\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1296,1310

Floor Tile:IS-2070-B Rug:HLR-1291 Curtain:SC7016 Shade:SC7623



SGM1298 [Seam Treatment]  
Floor Tile : IS-2062



SGM1296

NEW

SGM1297

NEW

SGM1298

NEW

SGM1299

NEW

### SGM1296 - SGM1299

Width 92cm

\*The impression of shading will vary depending on the fiber direction.

\*For important guidelines on selection and installation, please refer to the pp.150-159.





SGM1300

SGM1301

SGM1302 NEW

SGM1303



SGM1304

SGM1305

SGM1300 - SGM1303

Width 92cm ↔ 92cm

SGM1304 - SGM1305

Width 92cm

\*The impression of shading will vary depending on the fiber direction.

\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1311



SGM1310

NEW

SGM1311

SGM1312

#### SGM1310 - SGM1312

Width 92cm Water-repellent for textile



SGM1313



SGM1313

SGM1314

SGM1315

#### SGM1313 - SGM1315

Width 92cm Water-repellent for textile

\*Products with vertical warping are particularly prone to creases, so please handle with care during installation.  
\*For important guidelines on selection and installation, please refer to the pp.150-159.

**SGM1316**

Width 92cm  
Water-repellent for textile

**SGM1317**

Width 92cm  
Water-repellent for textile

**SGM1318**

Width 92cm  
Water-repellent for textile

**SGM1319**

Width 92cm  
Water-repellent for textile

**SGM1320**

Width 92cm  
Water-repellent for textile

**SGM1321**

Width 92cm  
Water-repellent for textile



NEW

**SGM1322**

Width 96cm †22cm ↔ 24cm  
Water-repellent for textile

**SGM1323**

Width 95cm  
†61.9cm ↔ 23.8cm  
Water-repellent for textile

\*SGM1316-1319 : Due to the use of natural materials, cottonseed hulls may be attached.  
\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1324

**SGM1324 - SGM1325**

Width 92cm Water-repellent for textile



SGM1325



SGM1326

**SGM1326 - SGM1327**

Width 95cm †11.2cm ↔ 11.9cm Water-repellent for textile



SGM1327



SGM1328

**SGM1328 - SGM1329**

Width 92cm Water-repellent for textile



SGM1329



SGM1330

**SGM1330 - SGM1331**

Width 94.5cm †30.9cm ↔ 23.7cm Water-repellent for textile



SGM1331

NEW

\*For important guidelines on selection and installation, please refer to the pp.150-159.



**SGM1332**

**SGM1332 - SGM1333**

Width 92cm Water-repellent for textile



**SGM1333**



**SGM1334**

NEW

**SGM1334 - SGM1335**

Width 92cm Water-repellent for textile



**SGM1335**

NEW



**SGM1336**

NEW

**SGM1336 - SGM1337**

Width 92cm Water-repellent for textile



**SGM1337**

NEW



**SGM1338**

NEW

**SGM1338 - SGM1339**

Width 92cm Water-repellent for textile




**SGM1339**

NEW

\*SGM1338, SGM1339 : Color difference is likely to appear at the joints, we recommend installation with inset seams.

\*For important guidelines on selection and installation, please refer to the pp.150-159.

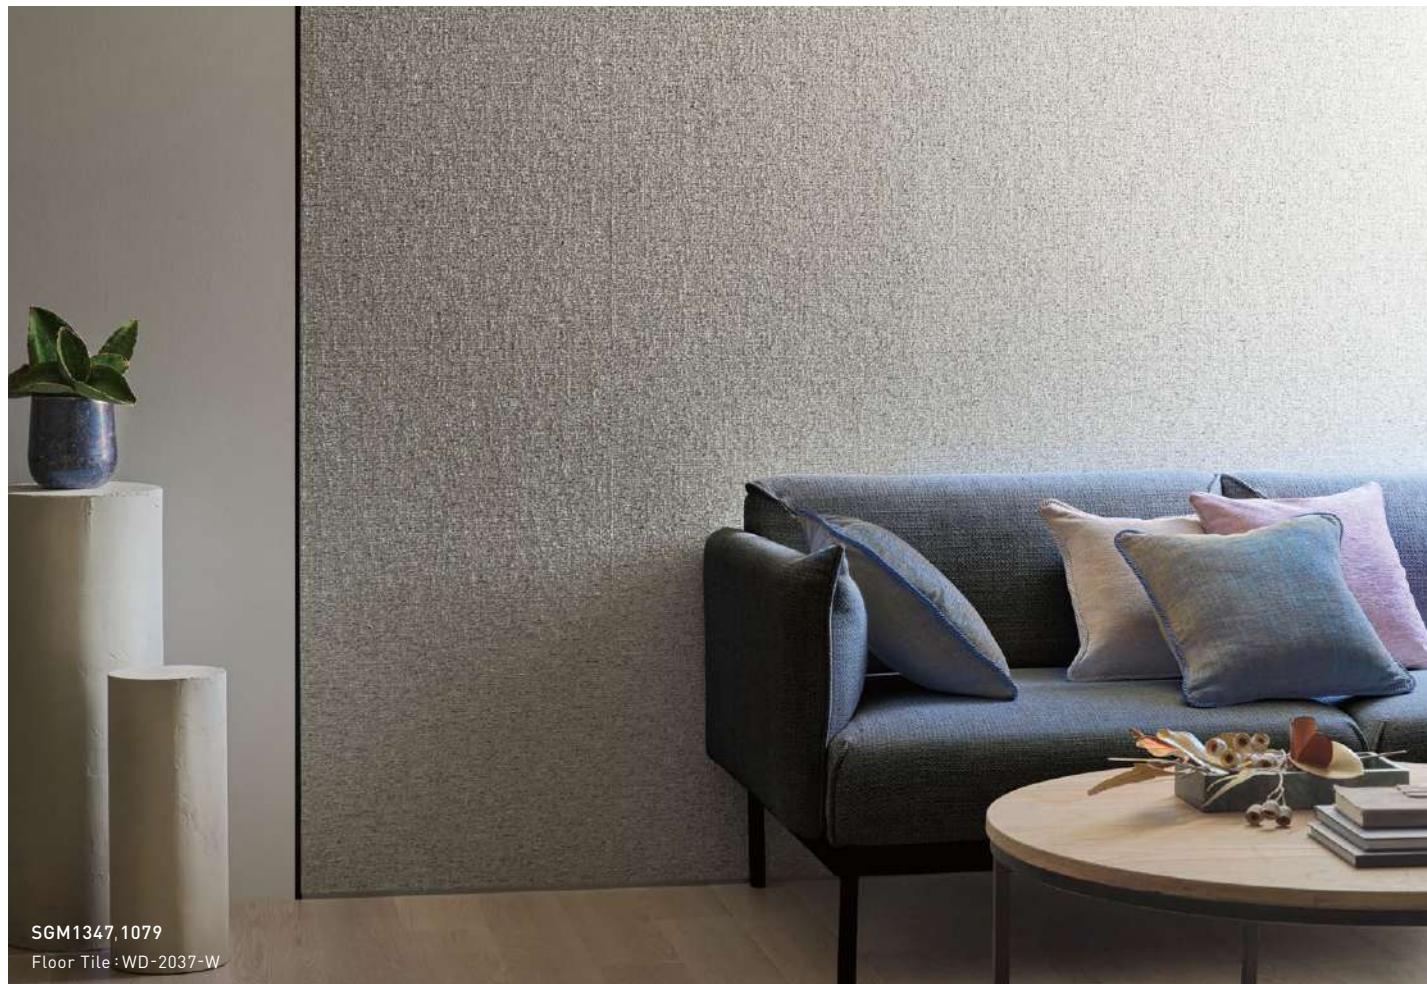




**SGM1340**

**SGM1340 - SGM1341**

Width 96cm ±20.7cm ↔ 16cm Water-repellent for textile

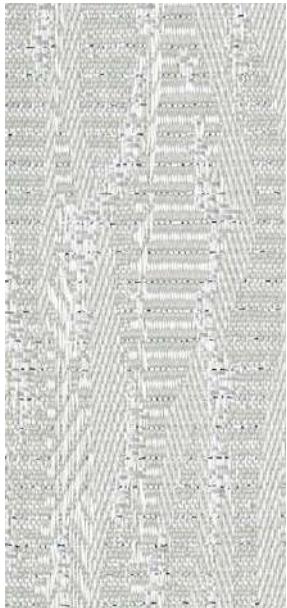

**SGM1341**



**SGM1342**

NEW

**SGM1342 - SGM1343**

Width 93.5cm ±23cm ↔ 31.2cm Water-repellent for textile



**SGM1343**

NEW



**SGM1344**

NEW

**SGM1344 - SGM1347**

Width 92cm Water-repellent for textile



**SGM1345**

NEW



**SGM1346**

NEW



**SGM1347**

NEW

\*For important guidelines on selection and installation, please refer to the pp.150-159.




SGM1348



SGM1348

NEW

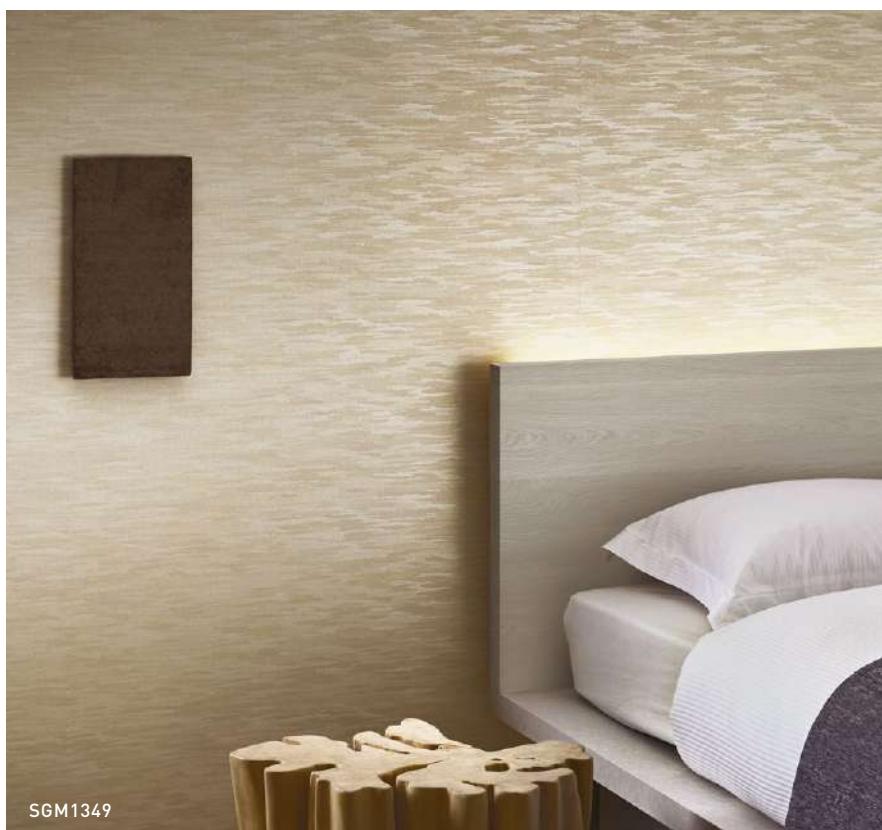

SGM1349



SGM1349

**SGM1348**

Width 95.5cm †16.3cm ↔31.9cm  
Water-repellent for textile


**SGM1349**

Width 96cm †40.5cm ↔48cm  
Water-repellent for textile

\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1350

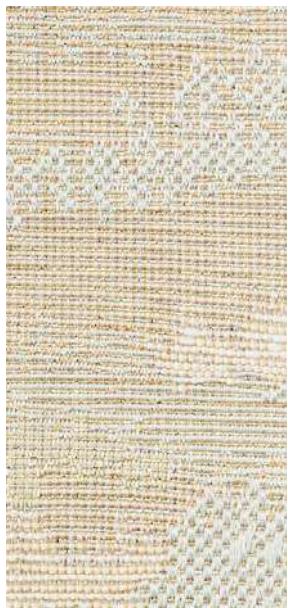

SGM1351



SGM1350

Width 92cm †28.7cm ↔ 30.8cm  
Water-repellent for textile

SGM1351

Width 95.5cm †56.5cm ↔ 95.5cm  
Water-repellent for textile

\*For important guidelines on selection and installation, please refer to the pp.150-159.

# ORI

TEXTILE WALLPAPER

---





SGM1361



SGM1362 NEW



SGM1363



SGM1364 NEW



SGM1365



SGM1366 NEW



SGM1367 NEW



SGM1367 - SGM1368

Width 92cm

Water-repellent for textile

\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1369



SGM1370



SGM1371

#### SGM1369 - SGM1371

Width 92cm



SGM1372



SGM1373



SGM1374

#### SGM1372 - SGM1374

Width 92cm



SGM1369

Carpet Tile : NTH-71701, 71702, 71703, 71704, 71705



SGM1372

\*SGM1369-1371 : Due to the nature of these products, creasing may occur.

Please handle with care during installation.

\*For important guidelines on selection and installation, please refer to the pp.150-159.



SGM1380



SGM1375

**SGM1375 - SGM1376**

Width 92cm



SGM1376 NEW



SGM1377

**SGM1377 - SGM1378**

Width 92cm



SGM1378



SGM1379

**SGM1379 - SGM1380**

Width 92cm



SGM1380

# Textile Wallpaper for Art Galleries and Museums

Maintain the proper exhibition environment in art galleries and museums

## Characteristics of the product

### ■ Suppresses the release of ammonia and acetic acid

If ammonia or acetic acid is present in the indoor environment where cultural assets and artworks are displayed, it may cause deterioration, fading, or discoloration of the exhibits.

Museum-grade woven wallpaper minimizes the release of these substances, helping to maintain an optimal display environment.

## Release concentration test results of each substance


Measured Substances	Standard concentration	For Art Galleries and Museums Textile Wallpaper
Ammonia	30ppb or lower	30ppb or lower
Acetic acid (as an organic acid)	170ppb or lower	80ppb or lower
Formaldehyde	80ppb or lower	1.46ppb
Acetaldehyde	30ppb or lower	N.D. (indicating below the quantification limit)

\*The reference density is a guideline value that is desirable for the display environment.

\*Ammonia and acetic acid are measured using passive indicators.

\*Formaldehyde and acetaldehyde levels are measured in accordance with JIS A 1901 using the Small Chamber Method.

\*Test results are measured values and are not guaranteed.

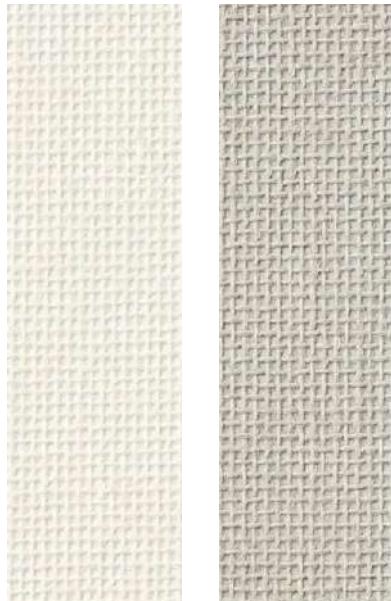

SGM1381

SGM1382

SGM1381 - SGM1382

Sold by roll

Width 92cm × 30m roll For Museums

\*SGM1381 and 1382 are sold by roll unit (30m/roll). They cannot be sold by meters.

\*For important guidelines on selection and installation, please refer to the pp.150-159.

# TSUCHI

DIATOMACEOUS EARTH / SCATTER COATING

---

**Soil—the foundation that has sustained life  
for countless generations.**

**For centuries, it has formed the walls of homes,  
silently witnessing the daily lives of the Japanese people.  
Reinterpreting traditional earthen walls in a modern style,  
this wallpaper creates a space that feels  
both nostalgic and new.**







SGM1391



SGM1392



SGM1393



SGM1394



SGM1395



NEW

SGM1396



SGM1393

SGM1391 - SGM1394

Width 92cm    Antifungal

SGM1395 - SGM1396

Width 92cm †69.8cm ↔92cm    Antifungal

\*SGM1395, SGM1396 : Use vermiculite and do not contain diatomaceous earth.  
\*For important guidelines on selection and installation, please refer to the pp.150-159.





SGM1397



SGM1398



SGM1398  
Floor Tile: WD-2013



SGM1399

NEW



SGM1400

NEW



SGM1401

NEW



SGM1402

NEW

#### SGM1397 - SGM1398

Width 92cm

Antifungal / Deodorant / Humidity Control

#### SGM1399 - SGM1402

Width 92cm †73.8cm ↔92cm Antifungal

Shell Powder Wallpaper

\*For important guidelines on selection and installation, please refer to the pp.150-159.





SGM1403



SGM1404



SGM1405



SGM1406



SGM1407



SGM1408



SGM1409

**SGM1403 - SGM1405**


Width 92cm †73.7cm ↔ 92cm  
Random Match  
Antifungal / Humidity Control

**SGM1406 - SGM1409**

Width 92cm  
Antifungal / Humidity Control

\*For important guidelines on selection and installation, please refer to the pp.150-159.



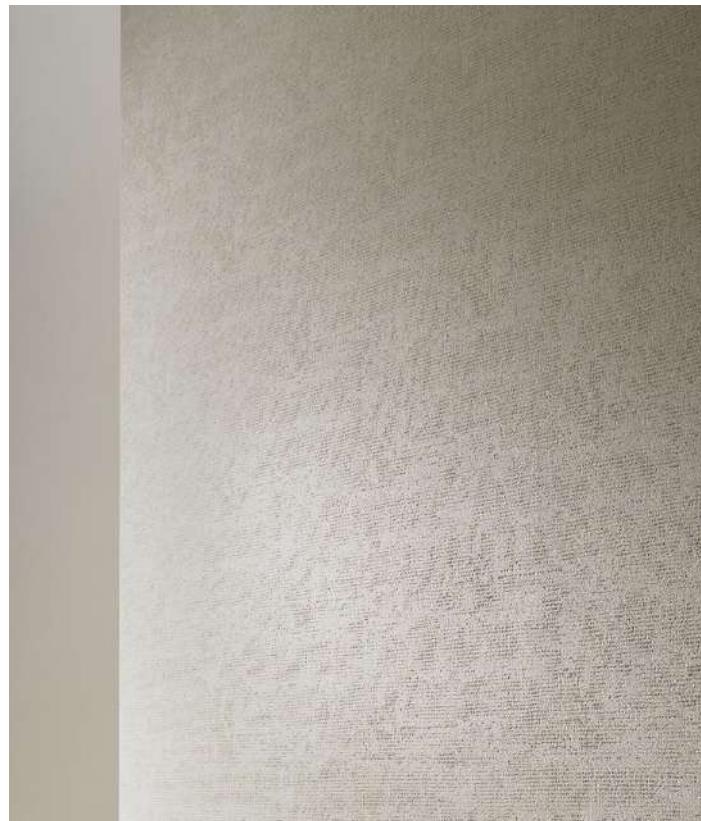

SGM1410



SGM1411 NEW



SGM1410



SGM1412



SGM1413

**SGM1410 - SGM1411**

Width 91cm †40cm ↔ 45.7cm Antifungal

**SGM1412 - SGM1413**

Width 92.5cm †64cm ↔ 92.5cm Antifungal

\*For important guidelines on selection and installation, please refer to the pp.150-159.

# STONE·SUEDE

miraslate™ / Ultrasuede®

---

**A wall sheet that faithfully reproduces the texture of natural stone through precision printing technology. Ultrasuede®, a high-quality suede-like artificial leather with a smooth and refined texture that appeals to the senses. These meticulously crafted materials, born from advanced technology and artistry, captivate discerning designers.**

**A wallcovering that faithfully reproduces the texture of natural stone through sophisticated printing technology.**

Easily elevate your space by using miraslate™ as a wall accent.

We offer 8 designs,  
including the beautifully textured "Oya Stone,"  
rare natural stone patterns,  
and the distinctive wood grain of "Mango Wood."



## 1. Lightweight with excellent workability.

### Installation on various substrates

miraslate™ is light weight and easy to adhere, allowing for simple installation on various substrates. Its sheet form also makes it easy to cut and suitable for curved surfaces.

### Shorter construction period

Because of its lightweight and thin base material, this product can be easily processed and cut on-site, offering excellent workability. It's also suitable for curved (R-shaped) applications.



Each tile features natural color variations and subtle shade differences, ensuring a seamless and natural finish even on large wall surfaces.


## 2. Expanded applications with a wide range of designs.

We've lined up a total of 8 designs featuring a rich array of colors and textures.

### Product Size

Nominal Dimensions (mm)	Thickness (mm)	Number of sheets (in sqm)
600 × 900 (Product Size : 597 × 897)	1~3	1.9 sheets

Note : Due to the sheet's textured surface, the thickness will vary in different areas.

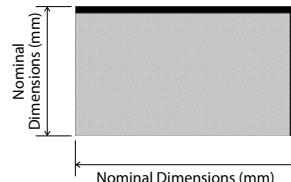

### Installation Procedure

- Before installation, always ensure the surface is cleaned, dried, and free of dirt.
- When applying to existing substrates, please conduct a thorough inspection for any lifting, cracks, or spalling beforehand and perform appropriate repairs.
- For installation on existing tiles, stone, or other surfaces not listed below, please contact your sales representative separately.

Please note that severe unevenness in the substrate may affect the levelness of the finished installation.

#### ■ Gypsum Board

Before cleaning, please treat nail heads and grind the surface, then apply adhesive.


#### ■ RC Surface

After cleaning, apply the adhesive directly and then attach the sheets.


#### ■ Adhesive

Recommended : Mixed Adhesive

\* For more details, please contact your sales representative.

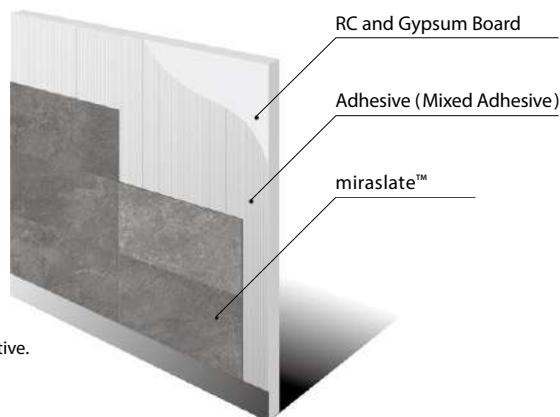

We recommend the following products for internal and external corners.

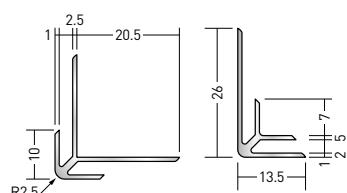

#### ■ External corner trim and Internal corner trim

External Corner Trim : code:55012 aluminum joiner DA-2.5 L=2730/ Soken Co., Ltd.  
[https://www.soken-sss.co.jp/product/alumi\\_joiner\\_n/de\\_joiner/de\\_joiner17.html](https://www.soken-sss.co.jp/product/alumi_joiner_n/de_joiner/de_joiner17.html)

Internal Corner Trim : code:55032 aluminum joiner BF-2.5 L=2730/ Soken Co., Ltd.  
[https://www.soken-sss.co.jp/product/alumi\\_joiner\\_n/iri\\_joiner/iri\\_joiner04.html](https://www.soken-sss.co.jp/product/alumi_joiner_n/iri_joiner/iri_joiner04.html)







**SGM1421 - SGM1428** NEW Sold by sheet

Nominal sheet size 160cm ↔ 90cm

\*For important guidelines on selection and installation, please refer to the pp.150-159.

ultrasuede®

SUEDE

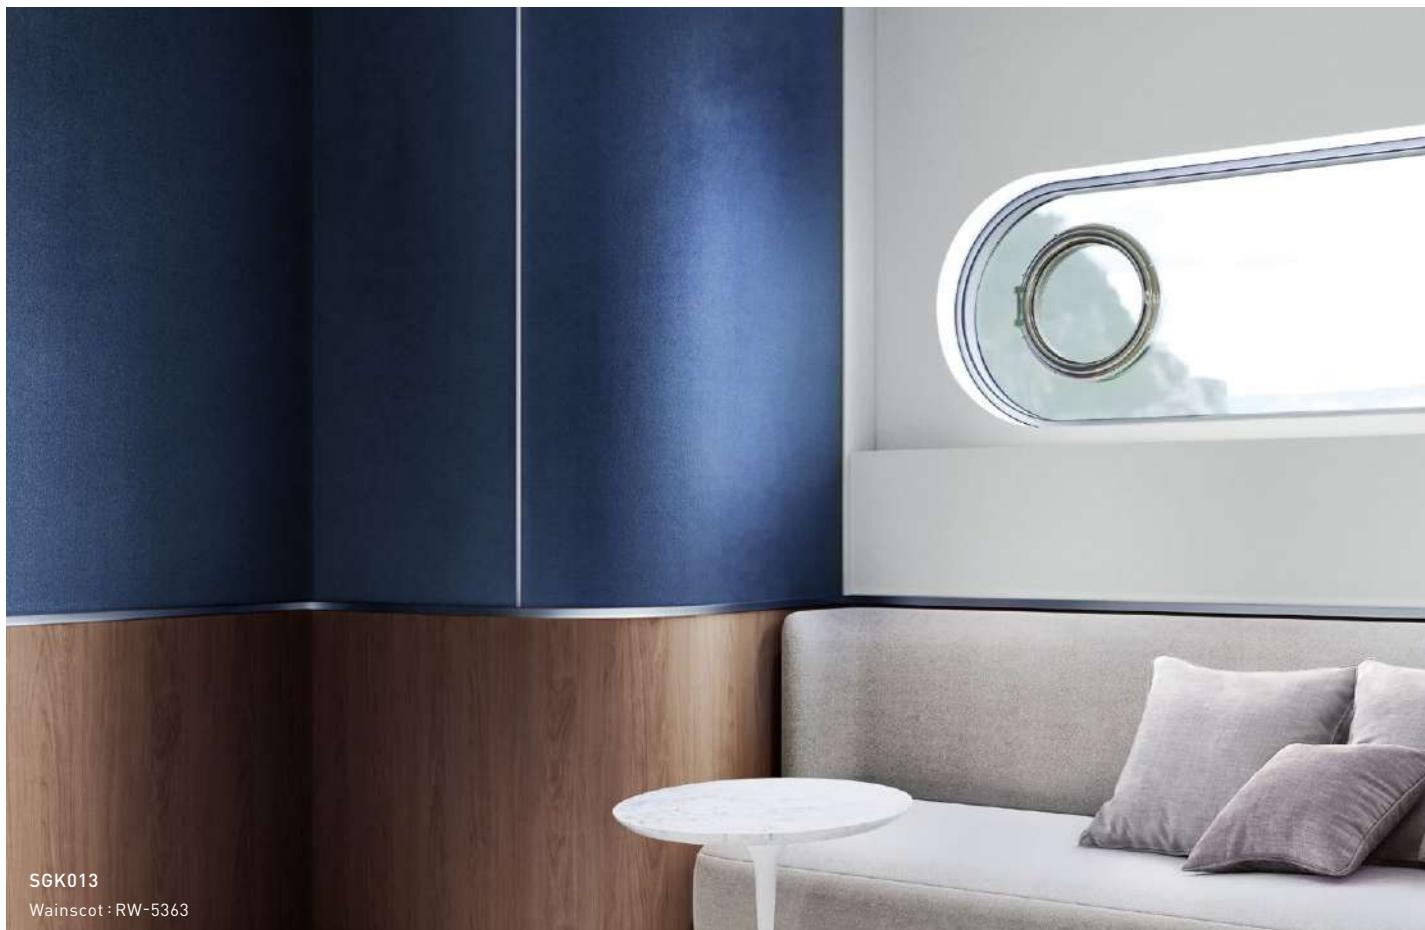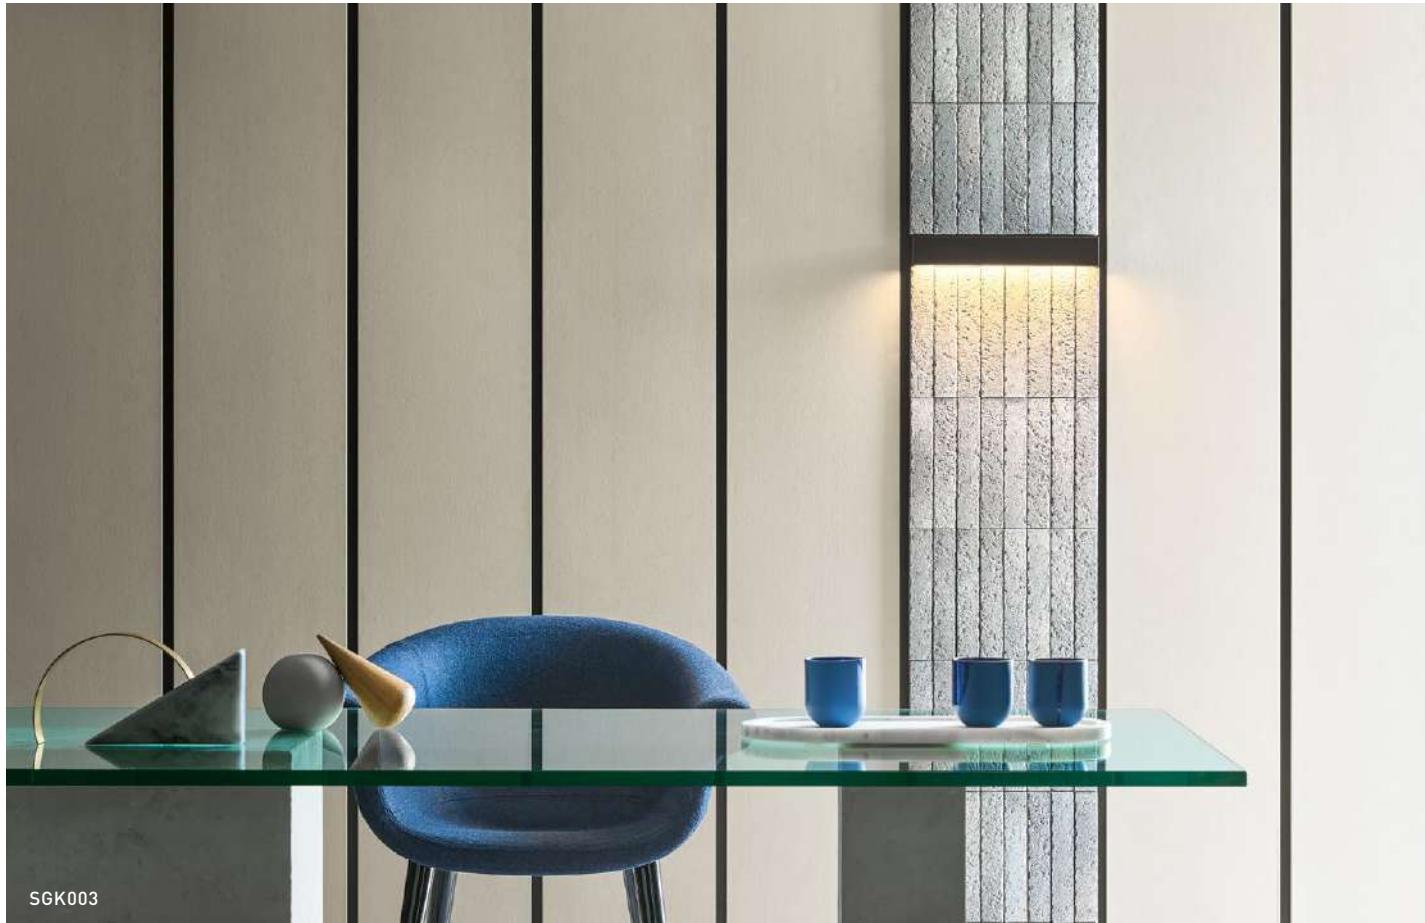

A luxurious suede-like material with advanced quality and functionality. Ultrasuede® is a high-quality, smooth-textured material that appeals to the senses. Its beauty conceals advanced quality and functionality, making it a leading-edge, Japan-quality material globally developed by Toray.

**Ultrasuede® is a material that continuously evolves towards a future of "beautiful possibilities."**



SGK001



SGK004



SGK003



SGK009



SGK014



SGK013



SGK002




SGK005



SGK008



SGK015

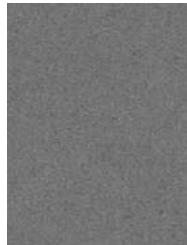

SGK020



SGK010



SGK003

**Connecting architectural and interior design to create a calm, sophisticated space.**

- Soft touch, luxurious feel.
- Beautiful colors and a wide range of variations.
- Resistant to fading.
- Easy to clean and highly maintainable.
- Lightweight, uniform, and easy to work with.
- Design flexibility with clean-cut edges and versatile post-processing.

### SGK001 - SGK020

NEW Sold by roll

Width 92cm × 15m roll  
Paper-based Wallpaper

#### Specification

Fabric weight	170g/sqm
Thickness	0.5mm
Fiber diameter	0.15dtex
Material Composition	Surface : 65% Polyester, 35% Polyurethane Backing : Backing Paper

#### Sick Building Syndrome Countermeasures

JIS or Minister's Certification Classification	JIS or Minister's Certification Number	Formaldehyde Emission Class
JIS Certification	GB0508022	F☆☆☆☆

#### Material Care Instructions

- The color of this material may appear to vary depending on the viewing direction and angle. This is due to the directional nap of the material's fibers, not a difference in color.
- When combining Ultrasuede® or other light-colored materials with medium to dark shades of Ultrasuede®, please be aware that color transfer may occur. We strongly recommend taking this into consideration beforehand.
- Ultrasuede® is made of very fine fibers, giving it a soft texture. Repeated rubbing can cause fuzz to transfer to other materials, or lead to pilling and tearing.
- We use very fine fibers to create Ultrasuede's unique touch. Because of this, high heat can damage its delicate feel or leave burn marks. Please be especially careful around cigarette embers, stoves, and other heat sources.

#### Care Instructions

- For light scuffs or dust, gently brush the surface with a lint roller or wipe it with a damp cloth.
- For heavier stains, dilute a neutral detergent to about 10 times its volume with water. Dampen a soft cloth or sponge with this solution and wipe the stained area, then wipe thoroughly with a damp cloth to ensure no detergent residue remains.
- To avoid water rings, gradually blend the cleaned area outwards from the center. After drying, brush the material to restore its nap.

#### Installation Precautions

- Basically, you can install it using the same methods as regular wallpaper.
- When performing the overlapped cutting method for installation, gently brush the seams with a lint roller or similar tool as a final finish to make the seams less noticeable.
- Ensure the substrate is smooth, and be careful not to get adhesive on the surface nap.

# Accent Panels (Cushion Type)


## Order-Made Products

Accent Panels are made of a polyurethane core covered with fabric. The three-dimensional nature of these panels will further enhance your interior design.



## Product Features

- You can create panels that perfectly match your vision by freely choosing the fabric and size.
- Installation is easy since no adhesive is used. This is a hook-and-loop fastener (Velcro) installation method.
- Since the panels are lightweight, they are easy to remove during renovations.
- Because they have sound-absorbing properties, these panels are recommended for spaces like bedrooms and home theater rooms.

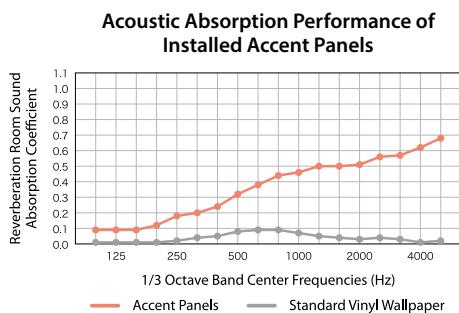

The testing method adheres to JIS A 1409.  
\*Please note that the test results in the left figure are measured values and not guaranteed values.

## How to Order

- ① Please choose your fabric from our curtain and upholstery fabric selection.
- ② Please Specify the Size.  
\*You can specify the size in 1 cm increments.

## Production size range

Min. size : 30cm x 30cm  
Max. size : 90cm x 180cm  
Thickness : approx. 2.6cm

\*For more details, please contact your sales representative.




# Panel Art (Wall-Mounted)

## Order-Made Products

Panel Art lets you decorate your space with an artistic flair, using wallpaper or curtain fabrics. You can enjoy it as a room accent, much like displaying a piece of art.

## Product Features

- You can freely choose the fabric and size from our selection of wallpaper, curtain, and upholstery materials.
- Installation is easy because specialized components are included in the set. We offer two types: cord hung type and cleat-hung type.

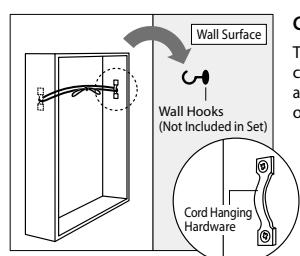


## How to Order

- ① Please choose your fabric from our curtain and upholstery fabric selection.
- ② Please Specify the Size.  
\*You can specify the size in 1 cm increments.
- ③ Please select the installation type.

## Production size range

Min. size : 30cm x 30cm  
Max. size : 90cm x 180cm  
Thickness : approx. 2.5cm

\*Please note that if one side of the panel exceeds 90 cm in length, the panel thickness will be approximately 3 cm.  
\*The base material is lauan plywood.

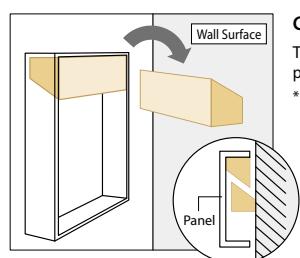

\*For more details, please contact your sales representative.



Panel Art : SGM1189

# Molding (Decorative Trim)

These moldings can be used for ceiling cornices, wainscoting caps, or picture frames to add an elegant touch to your interior.

## Product Features

### ■ Enhanced Grade

With its sophisticated design, it creates a luxurious space that is a cut above the rest. It can be used broadly, from traditional European interiors to modern styles.

### ■ Quick Installation

It offers excellent dimensional stability and good workability, which helps to improve work efficiency.

#### Frame



This trim can be widely used as a divider for separating wall finishes on upper and lower wall sections, and also as framing or accent decoration for wall-mounted items like artwork.

◀ MM90 (Frame)

#### Ceiling Trim



Used at the junction between the ceiling and wall, this molding elevates the overall look of the interior.

◀ MM72 (Ceiling Trim)  
MM84 (Frame)

Please check our website for our product lineup.



\*Thickness, size, and color may vary slightly.

Please make any necessary adjustments on-site during installation.

\*The validity period of mold samples may differ from that of the catalog.

Specifications and prices are subject to change during the catalog's validity period.



Molding : MM81, 84

# Smart Joiner (Trim)

## Smart Joiner SLIM


### Flat trim for beautifully finishing wallpaper joints.

This is a slim and stylish 7mm wide trim. It's a pre-installation type of flat trim, designed to have its attachment piece installed on the substrate beforehand.



#### POINT 1

Install the main joiner body by snapping it into the attachment that's already been installed on the substrate.

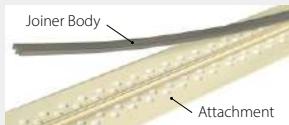

#### POINT 2


A simple shape that blends well with various interior spaces.




### For Flat Surfaces

#### Installation Image


- ① Attach the attachment to the substrate using both the included double-sided tape and adhesive.
- ② Smooth out the step between the substrate and the attachment by applying putty.
- ③ Apply wallpaper on the wall.
- ④ Attach the joiner body.



#### ■ Joiner Body (H2,500mm × W7mm)



#### ■ Attachment (H2,500mm × W46.5mm)



The joiner body and attachments are sold separately.  
Please order two types of parts : the joiner body (SRJ-211 to SRJ-253) and the attachment (SRJ-AT1) for installation.

## Smart Joiner EASY

### For Flat Surfaces


#### A retrofit trim for flat surfaces, featuring a simple design and easy installation.

This is a 10mm wide trim for flat surfaces that can be easily installed over existing wallpaper.



#### POINT

You can easily install it over existing wallpaper using the included double-sided tape in combination with instant adhesive (BB-546).



## Smart Joiner CORNER

### For Corner



#### Perfect for reinforcing corners and pattern separation.

This is a retrofit corner trim designed to reinforce corners and allow for distinct wallpaper separation at external corners.



#### POINT

You can easily install it over existing wallpaper using the included double-sided tape in combination with instant adhesive (BB-546).

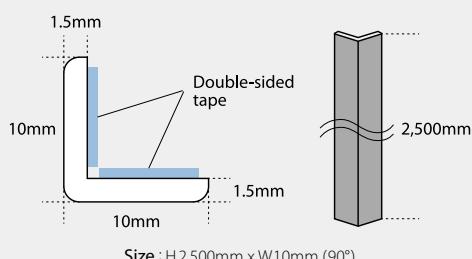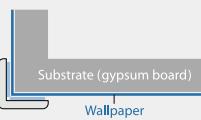

Size : H2,500mm x W10mm (90°)



### ■ Smart Joiner Product List

Color and Material	Solid Color Material : ABS resin laminated with olefin sheet						Metallic Material : ABS resin laminated with PVC sheet		
Color Image									
Smart Joiner SLIM (Attachments are sold separately.)	SRJ-211	SRJ-212	SRJ-213	SRJ-214	SRJ-215	SRJ-216	SRJ-251	SRJ-252	SRJ-253
Smart Joiner EASY	EGJ-411	EGJ-412	EGJ-413	EGJ-414	EGJ-415	EGJ-416	EGJ-451	EGJ-452	EGJ-453
Smart Joiner CORNER	SCN-11	SCN-12	SCN-13	SCN-14	SCN-15	SCN-16	SCN-51	SCN-52	SCN-53

### ■ Smart Joiner SLIM Attachment

Item no. : SRJ-AT1

# COLORED SEALANT

- 40 delicate colors to meet your needs
- Convenient one-touch caulking agent for interior
- New glossy type\*2 and clear color

## Available in 35 colors Small type

### BB-100～BB-135

10 Pieces/Case, 5 Cases/Box

Content : 200g/Piece  
Main component : Acrylic copolymer resin  
Usage capacity : 40m/200g  
Suitable substrate : Gypsum Board



## Available in 5 colors Large type

### BB-467～BB-475

6 Pieces/Case, 4 Cases/Box

Content : 500g/Piece (340g for clear color only)  
Main component : Acrylic emulsion resin  
Usage capacity : 100m/500g  
Suitable substrate : Gypsum Board



BB-467 *1 *2 White	BB-469 *1 *2 Light Ivory	BB-125 Sunny Brown	BB-111 Light Blue
BB-129 Blue White	BB-468 *1 Ivory	BB-130 Light Brown	BB-128 Blue Green
BB-118 Sky Gray	BB-112 Light Natural	BB-108 Caramel	BB-127 Blue
BB-122 Shadow White	BB-113 Natural	BB-115 Brown	BB-105 Dark Blue
BB-109 Light Gray	BB-120 Light Beige	BB-114 Dark Brown	BB-104 Light Purple
BB-126 *2 Dark White	BB-470 *1 New Beige	BB-100 *2 Black	BB-103 Light Pink
BB-119 Gray	BB-106 Beige	BB-135 *3 Real Black	BB-134 Red
BB-107 Ash Gray	BB-124 Ecru Beige	BB-475 *1 Clear	BB-133 Terracotta
BB-116 Moss Gray	BB-123 Sand Beige		BB-102 Yellow
BB-117 Dark Gray	BB-132 Rose Beige		BB-101 Light Green
BB-121 Rose Gray			BB-131 Olive Green

**Application** One-touch caulking agent for interior

**How to use** Please use protective tape to protect surrounding areas from adhesion. Before filling, clean the surface and cut the nozzle tip appropriately. Please flatten with a wet finger after filling. Please protect the tip of the nozzle with tape after use.

**Note** Do not use if there is a wide gap against the nozzle. Please note that the appearance of the actual product differs from the color shown in the sample book. The color before curing may differ from the target color. Prices, specifications and lineup are subject to change without notice.

\*1 : Large type (all other items are in small type)

\*2 : Matte type is also available.

\*3 : Matte type only

When ordering matte type, please add M to the end of the part number.

# ADHESIVE



## Dilution Type JIS/F☆☆☆☆

### NEW Sangetsu Adhesive

#### BB-378 18kg

Main component : Starch  
Color : White  
Suitable substrate : Gypsum Board  
JIS classification : Type 2, No.1  
Usage capacity : 180sqm/18kg

**Application** Adhesive for various wallpapers

**How to use** The mixing ratio of glue and water is basically 10:7 and mix it evenly.

## Standard Starch Paste Type

- An indoor-environmentally friendly adhesive, free of formaldehyde.



## Undiluted Type JIS/F☆☆☆☆

### MIXED Adhesive 100

#### BB-304 18kg (6kg × 3packs)

Main component : Starch and Vinyl acetate  
Color : White  
Suitable substrate : Gypsum Board  
JIS classification : Type 2, No.2  
Usage capacity : 100-120sqm/18kg

**Application** Adhesive for various wallpapers

**How to use** Please use undiluted solution.

## Compatible with Vinyl Wallpaper to Eco-Friendly Wallpaper

- The combination of vinyl acetate provides high adhesion.
- An indoor-environmentally friendly adhesive, free of formaldehyde.
- Offers a long open time, allowing for stress-free and efficient application.

# Important guidelines on selection

## Important guidelines on selection (General Information)

### 1. Antifungal Function

Based on the performance regulations for antifungal wallpaper established by the Wallcoverings Association, products with 0 test results are marked with "Antifungal".

Mycelial Growth	Results
No mold growth is visible to the naked eye or under the microscope.	0
Mold growth is not visible to the naked eye, but visible clearly under a microscope.	1
Mold growth is visible to the naked eye and the area of growth is less than 25% of the total sample area.	2
Mold growth is visible to the naked eye, and the area of growth is 25% or more and less than 50% of the total area of the sample.	3
The mycelium spreads actively, covering more than 50% of the total sample surface.	4
The mycelium grows vigorously, covering the entire surface of the sample.	5

\*The display calculates the average of 5 points of test pieces, rounded off to the first decimal place.

Although Antifungal products are treated with Antifungal finish, wallpaper alone cannot prevent mold growth. The growth of mold is greatly affected by the structure of the building and the indoor environment. Always maintain good ventilation to reduce humidity. Adding Antifungal agent to the glue at the time of installation is more effective.

### 2. Surface Strengthen Function

Based on the performance regulations for surface strengthen wallpaper established by the Wallcoverings Association, products with test results of grade 4 or above are marked as "surface strengthen".

Grade	Criteria
Grade 5	No visible change at first glance.
Grade 4	Some surface scratches are seen, but no comparatively large surface layer breakage, etc.
Grade 3	The tear of the surface layer is clearly visible.
Grade 2	The surface is torn and the backing paper is clearly visible ( length less than 1 cm).
Grade 1	The surface is torn and the backing paper is clearly visible (1 cm or more in length).

### 3. Functional Wallpaper

As for functional wallpapers, please understand the characteristics and cautions of each before selecting.

### 4. Environments

Please avoid using the product in high temperature, high humidity, wet environment or outdoors. Should the product be applied to surfaces with significant gaps, such as near the ceiling or indirect lighting, it is recommended to choose a thicker product.

### 5. Pattern Match

Please note that products that require pattern matching will require more length than solid color products. When installing the product, please refer to the "repeat" indication on the catalog to match the pattern.

### 6. Product using Pearl Ink and Glitter

Please note that the products with pearl ink or glitter, particles on the wallcovering surface may adhere if it is rubbed with clothing.

### 7. Installation Cost

Compared to standard PVC wallpaper, materials such as washi paper, foil wallpaper, and textile wallpaper require a more complex installation process, which may lead to higher installation costs. To ensure the best choice, please review the product characteristics and site conditions in advance.

## Important guidelines on selection and installation

For important guidelines on selection and installation of each product, please refer to the contents of each category on pp.151-156.

Product	[Classification] Important guidelines on selection and installation
<b>ELEMENTUM</b>	
SGM1001 - SGM1015	G
SGM1016 - SGM1023	J
SGM1024 - SGM1031	M
SGM1032 - SGM1041	D
<b>COLOR SELECTION</b>	
SGM1051 - SGM1062	F
SGM1063 - SGM1068	G
SGM1069 - SGM1074	J
SGM1075 - SGM1092	M
SGM1093 - SGM1097	G
SGM1098 - SGM1109	D
<b>WASHI / TRADITIONAL JAPANESE PAPER</b>	
SGM1111 - SGM1134	D
SGM1135	A
SGM1136	C
SGM1137 - SGM1152	A
SGM1153 - SGM1155	B
SGM1156 - SGM1165	A
<b>FOIL</b>	
SGM1181 - SGM1195	E
SGM1196 - SGM1208	L
<b>CORK</b>	
SGM1221 - SGM1230	N
<b>PAPER WEAVE</b>	
SGM1241 - SGM1266	J
<b>TEXTILE WALLPAPER</b>	
SGM1271 - SGM1295	G
SGM1296 - SGM1305	H
SGM1310 - SGM1351	G
<b>TEXTILE WALLPAPER</b>	
SGM1361 - SGM1380	G
SGM1381 - SGM1382	I
<b>DIATOMACEOUS EARTH, SCATTER COATING</b>	
SGM1391 - SGM1413	M
<b>miraslate™</b>	
SGM1421 - SGM1428	O
<b>Ultrasuede®</b>	
SGK001 - SGK020	K

### Important guidelines on selection and installation by classification (General Information)

#### Important guidelines on installation

- Carefully prepare the substrate and smooth the installation surface.
- When installing on a mortar or plywood base, apply a sealer treatment to prevent blisters and marks. SA Sealer (BB-318) is recommended to use. The sealer treatment stabilizes the breathability of the substrate and reduces the aging of the wallpaper surface.
- Avoid sudden temperature changes due to direct sunlight or air conditioning, and environmental changes such as dryness. It may cause gaps between the joints.

#### A. Paper-based Wallpaper : Hand-Crafted Japanese Paper

Feature : Handcrafted wallpaper made from traditional Japanese washi paper, with unique techniques applied to each sheet.

#### Important guidelines on selection

- As each product is handcrafted, colors and textures may vary. Please note that seams may not align perfectly.
- Please note that lumps of kozo fiber, which is the raw material, may be mixed in. This is a characteristic texture of natural materials.
- Since whitewash is applied on top of bleached kozo fiber, brown kozo fiber or skin may appear. Please note that this product has a unique texture of natural materials.
- Due to the use of natural materials, color variations may occur at the seams.
- Please handle with extra care, as it is made from natural materials.
- Installation may be more expensive due to the higher level of skill required.

#### Important guidelines on installation

- We recommend to layout the pieces and check the overall balances of colors and patterns before the installation.
- The recommended adhesive for Japanese Paper Wallpaper varies from product to product.
- After gluing, please fold it loosely to avoid creases and avoid stacking.
- The recommended open time is at least 15 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly. Do not use gluing machine for this products.
- Overlapping joint is recommended.
- \*We recommend Overlap cutting for SGM1142 and 1143 due to its characteristics.
- Use a soft brush and avoid hard tools like metal spatulas.
- Remove any glues on surface immediately with squeezed sponge or cloth.

#### B. Paper-based Wallpaper : Hand-Crafted Japanese Paper (Lacquer)

Feature : Hand-crafted Japanese Paper Wallpaper which is using lacquer.

#### Important guidelines on selection

- As each product is handcrafted, colors and textures may vary. Please note that seams may not align perfectly.
- Please note that lumps of kozo fiber, which is the raw material, may be mixed in. This is a characteristic texture of natural materials.
- Due to the use of natural materials, color variations may occur at the seams.
- Please handle with extra care, as it is made from natural materials.
- Installation may be more expensive due to the higher level of skill required.

#### Important guidelines on installation

- We recommend to layout the pieces and check the overall balances of colors and patterns before the installation.
- The recommended adhesive is BB-307.
- After gluing, fold it loosely to avoid creases and please avoid stacking.

- The recommended open time is at least 30 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly. Do not use gluing machine for this products.
- Overlapping joint is recommended. To enhance adhesion, please sand the surface of overlapping areas.
- Use a soft brush and avoid hard tools like metal spatulas.
- Due to the characteristics of the product, there is a risk of the surface.
- Remove any glues on surface immediately with squeezed sponge or cloth.

### C. Paper-based Wallpaper : Hand-Crafted Japanese Paper (Transparent)

Feature : Translucent Hand-crafted Japanese Washi Wallpaper.

#### Important guidelines on selection

- As each product is handcrafted, colors and textures may vary. Please note that seams may not align perfectly.
- Since whitewash is applied on top of bleached kozo fiber, brown kozo fiber or skin may appear. Please note that this product has a unique texture of natural materials.
- Due to the use of natural materials, color variations may occur at the seams.
- Please handle with extra care, as it is made from natural materials.
- Installation may be more expensive due to the higher level of skill required.

#### Important guidelines on installation

- We recommend to layout the pieces and check the overall balances of colors and patterns before the installation.
- Since this product tends to allow the substrate to show through, apply Color Sealer Muhen (white) (manufactured by Yayoi Chemical Industry Co., Ltd.) to the entire surface before installation.
- The recommended adhesives are BB-378 and Wall Bond 105 (Manufactured by Wall bond Industries Co., Ltd.).
- After applying the adhesive, fold the material loosely to avoid creases and avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly. Do not use gluing machine for this products.
- Overlapping joint is recommended.
- When applying the rollers, use a cloth or paper to apply the rollers, and be careful not to damage the texture.
- Use a soft brush and do not use hard tools such as metal spatulas.
- Remove any glues on surface immediately with squeezed sponge or cloth.

### D. Paper-based Wallpaper : Machine-Made Japanese Paper

Feature : Transparent Hand-crafted Japanese paper Wallpaper.

#### Important guidelines on selection

- Please note that due to the use of natural materials seams may not align perfectly.

- Please note that lumps of kozo fiber, which is the raw material, may be mixed in. This is a characteristic texture of natural materials.
- Since whitewash is applied on top of bleached kozo fiber, brown kozo fiber or skin may appear. Please note that this product has a unique texture of natural materials.
- Long pieces of straw or hemp may come off.

#### Important guidelines on installation

- Use putty of the same color as the substrate. Special care should be taken with products that are thin in thickness or white in color.
- The recommended adhesives are BB-378 and BB-304.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly, and be careful not to create any puddles.
- Overlapping joint is recommended.
- Do not use a roller or similar tool to apply strong pressure to the overlapping area. Instead, use a brush or another tool to press it down.
- Use a soft brush and avoid hard tools like metal spatulas.
- Remove any glues on surface immediately with squeezed sponge or cloth.

### E. Paper-based Wallpaper : Foil Wallpaper

Feature : Wallcovering which is using foils.

#### Important guidelines on selection

- As each product is handcrafted, colors and textures may vary. Please note that seams may not align perfectly.
- Please handle with extra care, as it is made from natural materials.
- Do not install on non-water-absorbent substrates such as metal plates.
- Do not install the product around water, such as kitchen and bathrooms, or other places where water may splash.
- Installation may be more expensive due to the higher level of skill required.

#### Important guidelines on installation

- To fix the curl, unpack and rewind (Reverse) the roll a day before installation.
- In the case of indirect lighting, the substrate may stand out.
- The recommended adhesives are BB-378 and Wall Bond 105 (Manufactured by Wall bond Industries Co., Ltd.).
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 15 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly, and be careful not to create any puddles. We recommend applying the adhesive by hand.
- Attaching outlet covers or similar items before the adhesive dries can cause discoloration, so please ensure they are installed only after the adhesive is completely dry.
- Overlapping joint is recommended. To enhance adhesion, please sand the surface of overlapping areas. Use a protective cloth or paper over the overlap and press down firmly with a roller.
- Use a soft brush and do not use hard tools such as metal spatulas.
- If sweat or glue adhere on the surface of the wallpaper, wipe it off with a damp microfiber cloth, and then thoroughly wipe away any moisture with a dry microfiber cloth. Please take extra care during installation in the summer, as sweat can easily adhere to the surface.

# Important guidelines on selection and installation

## F. Paper-based Wallpaper :

### Direct Fleece Wallcovering (Made in Japan)

Feature : Wallpaper which directly prints on fleece paper.

#### Important guidelines on selection

- Please note that the solid area of the wallpaper is easily scratched.
- Due to the characteristics of the material, partial discoloration may occur due to aging.

#### Important guidelines on installation

- The recommended adhesives are BB-378 and BB-304.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 15 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Use a soft brush and avoid hard tools like metal spatulas.
- If glue adheres to the surface of the wallpaper, wipe it off quickly by dabbing with a clean, dry cloth.

## G. Textile Wallpaper

Feature : Woven wallpaper produced through diverse weaving techniques.

#### Important guidelines on selection

- Due to the characteristics of the product, color differences or misalignment may occur at the joints.
- Please note that fiber knots may be visible on the wallpaper surface due to the manufacturing process.
- The pattern does not match exactly. Please note that the joint part may be noticeable.
- Although we apply anti-fray treatment to textile wallpaper, it is not possible to completely prevent fraying.

#### Important guidelines on installation

- Use putty of the same color as the substrate. Special care should be taken with products that are thin in thickness or white in color.
- The recommended adhesives is BB-378. Due to the difference in the expansion and contraction rate between the surface textile and the backing paper, the backing paper may wrinkle, which may affect the surface textile, so please pay attention to the selection of the adhesive and amount applied.
- After gluing, fold it loosely to avoid creases and please avoid stacking. Especially for the vertical warping products it easily get wrinkled so please handle with extra care.
- The recommended open time is at least 20 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Install with attention to the top and bottom directions so that the selvage threads are on the right side.
- Use a soft brush or urethane roller to crimp. Stroke in a constant direction and be careful not to fray the edges.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Please join the edges with the effective widths.
- Do not use a damped cloth nor detergents as it may become a stain.
- Keep away from water droplets as it may leave a mark as a ring stain.
- If glue adheres to the surface of the wallcovering, wipe it off quickly by dabbing with a clean, dry cloth.

## H. Textile Wallpaper (Fur)

Feature : Wallpaper made with raised pile fabric.

#### Important guidelines on selection

- Due to the characteristics of the product, there may be color differences at the joints.
- The pattern does not match exactly. Please note that the joint part may be noticeable.

#### Important guidelines on installation

- Use putty of the same color as the substrate. Special care should be taken with products that are thin in thickness or white in color.
- The recommended adhesives is BB-378.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly. Do not use gluing machine for this products.
- Install with attention to the top and bottom directions so that the selvage threads are on the right side.
- Use a soft brush or urethane roller to crimp. Stroke in a constant direction and be careful not to fray the edges. Be sure not to cut the fur.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Please join the edges with the effective widths.
- Do not use a damped cloth nor detergents as it may become a stain.
- If glue adheres to the surface of the wallcovering, wipe it off quickly by dabbing with a clean, dry cloth.

## I. Textile Wallpaper (For Art Galleries and Museums)

Feature : Textile wallcovering that suppresses the release of ammonia and acetic acid to maintain a comfortable exhibition space.

#### Important guidelines on selection

- Due to the nature of the product, color variations or misalignment may occur at the joints.
- Please note that fiber knots may be visible on the wallpaper surface due to the manufacturing process.
- The pattern does not completely match. Please note that the joint part may be noticeable.
- Although we apply anti-fray treatment to textile wallpaper, it is not possible to completely prevent fraying.

#### Important guidelines on installation

- Use putty of the same color as the substrate. Special care should be taken with products that are thin in thickness or white in color.
- The recommended adhesives is BB-378. Due to the difference in the expansion and contraction rate between the surface textile and the backing paper, the backing paper may wrinkle, which may affect the surface textile, so please pay attention to the selection of the adhesive and amount applied.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Install with attention to the top and bottom directions so that the selvage threads are on the right side.

- Use a soft brush or urethane roller to crimp. Stroke in a constant direction and be careful not to fray the edges.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Please join the edges with the effective widths.
- Do not use a damped cloth nor detergents as it may become a stain.
- Keep away from water droplets as it may leave a mark as a ring stain.
- If glue adheres to the surface of the wallcovering, wipe it off quickly by dabbing with a clean, dry cloth.

### **J. Textile Wallpaper Paper Textile / Sisal / Manila hemp**

Feature : Wallpaper woven with natural fibers (paper and linen).

#### **Important guidelines on selection**

- Due to the natural material, the joints will not match. Also, please note that the color of the product is not even.
- Please note that fiber knots may be visible on the wallpaper surface due to the manufacturing process.

#### **Important guidelines on installation**

- The recommended adhesives are BB-378 and BB-304.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Please join the edges with the effective widths.
- If glue adheres to the surface of the wallcovering, wipe it off lightly with a hard sponge or cloth.
- If you are concerned about the fluffiness of the sisal, cut it with scissors.

### **K. Textile Wallpaper Ultrasuede**

Feature : Wallpaper made of ultrafine fiber.

#### **Important guidelines on selection**

- Due to the characteristics of the product, there may be color differences at the joints.

#### **Important guidelines on installation**

- Use putty of the same color as the substrate. Special care should be taken with products that are thin in thickness or white in color.
- The recommended adhesives are BB-378.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- Apply the adhesive evenly, and be careful not to create any puddles.
- Install with attention to the top and bottom directions so that the selvage threads are on the right side.
- Use a soft brush or urethane roller to crimp. Stroke in a constant direction and be careful not to fray the edges. Be sure not to cut the fur.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Please join the edges with the effective widths.
- Do not allow the glue to adhere to the surface of the wallpaper.

### **L. PVC Wallpaper, Paper-based Wallpaper Aluminum Foils, Aluminum-Metallized Wallpaper**

Feature : Aluminum foils and aluminum-metallized wallpaper with printing designs.

#### **Important guidelines on installation**

- When the room temperature is low, warm the site and material before the installing. Blister likely to occur at low temperature.
- The recommended adhesives are BB-378 and BB-304. For diluted glues, use reinforcing glue 300 BB-451 if necessary.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 30 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- When installing external corners, firmly press down the folded wallpaper surface with a clean cloth. Please note that this product is laminated with metal and is therefore stiffer compared to regular PVC wallpaper.
- Please use a cloth or paper between the roller and the wallpaper when rolling.
- Use a soft brush and avoid hard tools like metal spatulas.
- If glue or dirt adheres to the surface of the wallcovering, wipe it off with a clean damped cloth, and then wipe it clean with a dry cloth. If any residue is left, it may cause discoloration.

### **M. Diatomaceous Earth, Juraku, Shell Powder Wallpaper**

Feature : Wallpaper which is using natural diatomaceous earth and ore.

#### **Important guidelines on selection**

- Due to the use of natural materials, color differences may occur at the joints.
- Due to the manufacturing process, particles may fall off.

#### **Important guidelines on installation**

- The recommended adhesives are BB-378 and BB-304.
- After gluing, fold it loosely to avoid creases and please avoid stacking.
- The recommended open time is at least 15 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- When allowing open time, avoid storing wallpaper in protective bags as this can create a high-temperature and high-humidity environment, potentially causing the surface material of the wallpaper to detach.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Do not allow the glue to adhere to the surface of the wallpaper, as this may cause discoloration and missing particles on the surface.
- Please handle with care after gluing, as the material on the surface of the wallpaper may come off.
- Use a soft brush and avoid hard tools like metal spatulas.
- Do not wipe with damped cloth nor detergent as it may cause stains.
- If glue adheres to the surface of the wallpaper, wipe it off quickly by dabbing with a clean, dry cloth.

# Important guidelines on selection and installation

## N. Cork Wallpaper

Feature : Imported wallpaper made with natural cork.

### Important guidelines on selection

- Due to the natural material, the colors and textures of the product may vary. Please also note that the joints may not align perfectly.

### Important guidelines on installation

- The recommended adhesives are BB-378 and BB-304.
- After gluing, Do not fold it; instead, roll it up for storage. Please note that the cork may crack if it is piled up and a strong load is applied.
- The recommended open time is at least 10 minutes, but it varies with temperature and humidity. Adjust accordingly to site conditions. Excessive open time may cause drying, leading to joint gaps, misalignment, or difficulty in adjustment, which can affect installation quality.
- When allowing open time, avoid storing wallpaper in protective bags as this can create a high-temperature and high-humidity environment, potentially causing the surface material of the wallpaper to detach.
- Always use a cutter with a sharp edge, and install with underlayment tape (BB-471) to avoid cutting into the surface of the substrate board.
- Use the reinforcing adhesive 300 Clean (BB-451) and carefully crimp the corners.
- If sweat or glue adhere on the surface of the wallpaper, wipe it off with a damp cloth.

## O. Wallpaper Other miraslate™

Feature : Wall sheet that faithfully reproduces the texture of natural stone.

### Important guidelines on selection

- This product is for vertical wall use only. It cannot be applied to ceiling.
- Each tile has a different color and texture. Kindly understand that joints will not match.
- Physical impact may cause damage. The four corners are particularly prone to chipping, so handle with care.

### Important guidelines on installation

- We recommend laying out the pieces and checking the overall balance of colors and patterns before installation.
- The recommended adhesive is BB-304.
- Apply the adhesive evenly, and be careful not to create any puddles. We recommend applying the adhesive by hand.
- Tiles can be cut with a cutter. In principle, when cutting, insert the blade from the tile surface side. After cutting to about 2/3 of the depth, you can break the tile by bending along the cut line.
- Use a urethane roller to firmly crimp the tile. Do not straddle the joint. Do not use metal rollers as they may damage the tile surface.
- If adhesive adheres to the tile surface, wipe it off with a damp microfiber cloth, and then thoroughly wipe away any moisture with a dry microfiber cloth.

## Important Notes on Wallpaper Material Characteristics

### 1. Regarding Seams and Potential Peeling Issues

Since wallpaper is applied by joining sheets with an effective width on base materials such as gypsum board, seams are inevitable. Please note that depending on the wallpaper's specifications, design, and usage conditions, these seams may be visible. Additionally, over time, gaps may form due to the wallpaper expanding and contracting or beginning to peel.

### 2. Notes on Possible Discoloration

The wallpaper itself does not discolor on its own due to external factors. However, depending on the installation and usage environment, fading from ultraviolet rays or changes such as discoloration and staining may occur.

### 3. Notes on Surface Durability

Please note that scratches or tears may result from impact, abrasion, or friction.

### 4. Notes on Potential Cracks

Cracks may appear on the surface of the wallpaper due to vibrations from the building or its underlying structure. This is especially common at joints between different base materials or at seams in the substrate where there is no structural support, as these areas are more susceptible to movement. Please note that wallpaper alone cannot prevent cracking caused by such vibrations.

### 5. Color Appearance Notice

Please note that slight color differences may exist between the actual product and the samples or photographs shown in the sample book. Colors may also appear differently depending on the light source and usage environment (a phenomenon known as metamerism). Additionally, minor color variations may occur between different production lots.

## Notes on Installation (General Information)

### 1. Substrate Preparation

#### [Smooth finishing of the substrate]

In order to prevent unevenness after installation, please finish the substrate smoothly. To avoid discoloration of screws and nails after installation, hammer in the protrusions completely and prevent rusting.

#### [Sealer application tailored to the substrate and conditions]

Direct application of wallpaper to wood-based, plywood, concrete, or mortar substrates may cause stains or discoloration on the wallpaper. Be sure to prepare the substrate with a dedicated sealer for each type. Applying a sealer prevents adhesion failures and discoloration, and also makes it easier to remove during renovations.

**[Using putty of the same color as the substrate]**

Use putty of the same color as the substrate. If you use putty of a different color from the substrate, the color of the putty may be visible after installation.

**[Dry Substrate]**

Wet substrates such as concrete or mortar, and areas where sealer or putty has been applied, should be sufficiently dry (moisture content of 11% or less) before starting installation. Insufficient drying may result in discoloration, peeling, or mildew on the wallcovering.

**[Remove the backing paper remaining on the substrate surface]**

When replacing wallcovering, if the backing paper of the previously applied wallcovering remains, remove the remaining backing paper completely before installation. If it is left in place, it may cause gaps and lifting.

**2. Adhesive****[Preparation for installation site environment]**


Please consider adjusting the adhesive mixture and open time according to the environment and temperature, or taking measures such as warming the room. Be sure to follow the precautions for the adhesive, especially in environments below 5°C, as this will result in weak adhesion and installation failure.

**[Amount of Dilution/Application]**

Please adhere to the dilution ratio specified by the adhesive manufacturer. Apply the adhesive evenly, with a target application rate of 140-160g/sqm.

**[Notes after gluing]**

Please allow an appropriate open time after applying adhesive to the wallpaper. This will make installation easier and prevent blisters and gaps. Also, avoid folding the wallpaper tightly and make sure that no load is applied to the curved parts. Folding creases may occur and may not return to their original state.

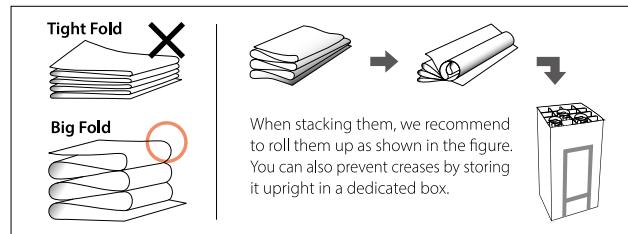**[How to Fold after Gluing]****3. Installation****[Check batch No. and Installation notes]**

Please use products from the same batch when installing in the same space. If products from different lots are used, problems such as color differences may occur. Also, please be sure to check the installation precautions thoroughly before proceeding with the installation.

**[Effective Width]**

Be sure to use wallcovering with an effective width. The overlapping selvage is not included in the effective width. Using beyond the effective width may cause color differences between the joints.

**[Precautions for Gypsum Board Substrate]**

If you cut into the base paper of gypsum board with a cutter, it may cause gaps in the seams. Please use the underlay tape when cutting. Also, avoid jointing wallpapers near the board seams as it can affect the finish.

**[Precautions for Veneer Substrate]**


When installing by overlap-cutting on a wood substrate such as veneer, scratching the sealer-applied surface with a cutter may cause discoloration due to exudation of scum. When cutting, we recommend using underlay tape or butt joint installation.

**[Pattern Matching]**

For products that require pattern matching, "Repeat" is noted in the catalog. The repeat value is a theoretical value and may lead to slight mismatches. At the time of installation, please refer to the joint mark and visually align the patterns to cut by overlapping.

**[Joint Position]**

Please join the wallpaper at the edges. Joining the edge to the center can result in color differences. Also, ensure the top and bottom, as well as the left and right sides, are aligned and installed in the same direction. Pay particular attention when installing around openings or when using leftover material for patching or repairs; installing only a section horizontally can easily cause color variations.

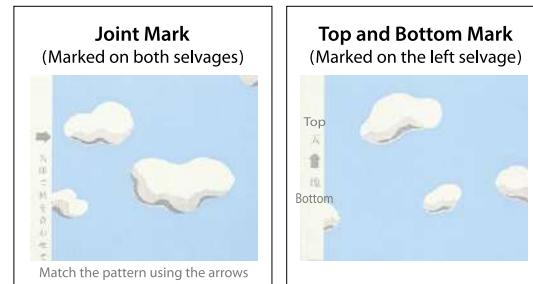**[Marks on Wallpaper's Edge]****[Adhesive and Stain Removal]**

Please take extra care to prevent adhesive or dirt from adhering to the wallpaper surface or moldings. If any adheres, immediately wipe it off with a cloth moistened with clean water, and then wipe it dry. Leaving adhesive or dirt on the surface can cause mold or discoloration.

**[Initial Installation Check]**

While we maintain the highest standards of quality, we ask that you inspect the wallpaper for any issues after installing the first three strips of wallpaper. Should you identify any clear defects, please stop installation immediately and contact your distributor or sales representative. Please note that we cannot compensate for installation costs incurred after the first three strips.

**4. Protection Measures****[Air Drying After Installation]**

After installation, allow the adhesive to air dry until it sets. Rapid drying can cause peeling or curling.

**[Protective Tape]**

Please be aware that using strong adhesive tape can cause tearing, stains, and discoloration.

# Maintenance for Wallpaper

## 1. General Notes

### [Ventilation]

There may be residual odors from the installation, so please ventilate thoroughly for about a week after moving in.

### [Protection from Direct Sunlight]

Discoloration may occur in places exposed to direct sunlight or hot air for extended periods. We recommend blocking the sunlight with a curtain or glass film. Also, be careful not to let the hot air from heaters, such as stoves, come into contact with the wallpaper directly.

### [Cigarette Smoke and Kitchen Oil Smoke]

Cigarette smoke and kitchen oil smoke will turn the wallpaper yellow in a short period of time, resulting in stubborn stains. Please keep the room ventilated.

### [Chemicals and Cosmetics]

Keep away spray chemicals (insecticides, paints, cosmetics, etc.) from the wallpaper. Also, do not apply medicines such as topical medications or lipstick. Depending on the type of chemicals, the adhered color may not come off or the wallcovering may discolor.

### [Maintain a Gap Between Furniture and the Wall]

Wallpapers may be discolored by pigments in furniture paints and veneers. Allow some space between the furniture and the wallpaper. This not only prevents discoloration but also helps avoid condensation and mold growth.

### [Avoid direct contact between rubber products and the wall]

Do not attach rubber products directly to wall surfaces or use tapes containing rubber-based adhesives. A chemical reaction may occur between the plasticizers in vinyl chloride wallcoverings and the antioxidants in rubber products, potentially resulting in discoloration or staining—commonly referred to as rubber migration.

### [Do Not Stick Adhesive Tape]

Do not apply adhesive tape (such as cellophane tape or duct tape) to the wallpaper. The adhesive can transfer to the wallpaper, causing discoloration and stains. Rubber-based adhesives, in particular, are prone to causing discoloration, so please be cautious. Additionally, there is a risk of damaging the wallpaper when removing the adhesive tape.

## 2. Cleaning and Maintenance Guide

### [Ordinary PVC Wallpaper]

Wipe off stains such as food, drink, or seasoning immediately with a firmly squeezed sponge or cloth. Use a mild detergent for difficult stains. Rinse any remaining detergent from the wallpaper with clean or lukewarm water.

\*Avoid strong detergents or solvents like thinner, which can discolor or damage the surface.

### [Washi/Japanese Wallpaper]

Do not wipe with water as it may cause stains. If dust adheres to the surface, use a brush to remove it.

### [Diatomaceous Earth Wallpaper]

Do not wipe with water as it may cause stains. If dust adheres to the surface, use a brush to remove it. If the stain is noticeable, remove it by dabbing the stain with a tightly wrung cloth.

### [Textile Wallpaper and Paper Weave Wallcovering]

Do not wipe with water as it may cause stains. If dust adheres to the surface, use a brush to remove it. If the stain is noticeable, remove it by dabbing the stain with a tightly wrung cloth.

## 3. Maintenance for Peeled-Off Wallpaper

If there is partial peeling, remove dust and dirt before the peeling spreads, and then carefully apply glue to the back of the wallcovering and press it down. It is difficult to repair items that have been peeled for a long time or that have deteriorated and become hard, so we recommend replacing them with new wallcovering.

## 4. Molds

Mold is not only an aesthetic issue but can also pose health risks, such as allergies and asthma, so caution is necessary. While some wallpapers have anti-mold properties, wallpaper alone cannot prevent mold growth.

### [Prevent Mold]

Molds are greatly affected by the structure of the building and the living environment. Always ensure good ventilation and low humidity.

### [If Mold Occurs]

If mold appears only on the surface of the wallpaper, it is effective to wipe it off with rubbing alcohol as soon as possible (the surface may get damaged depending on the type of wallpaper, so test before using it in an inconspicuous area). If you have a large amount of mold, we recommend that you consult a professional.

## 5. Dew Condensation

To prevent stains, peeling, and mold caused by condensation and high humidity, please maintain good indoor ventilation and humidity levels.

### [Ventilation/Dehumidification]

Maintain consistent ventilation to expel water vapor from heating devices and other sources. Take extra care with steam produced in bathrooms and while cooking. Utilizing dehumidifiers and moisture absorbers is also effective.

### [Improve Ventilation]

Please keep a space at the back of furniture to improve the air flow throughout the building.

### [Dew Condensation in Winter]

Winter is a time when condensation easily occurs due to the large temperature difference between indoor and outdoor air. It tends to occur especially after using a humidifier. Please try to ventilate and dehumidify frequently.

## 6. Others

We are recommend to replace the wallpaper for 5-10 years depending on the usage, while performing some maintenance on a daily basis.

## Handling and Delivery Cautions

### 1. Receipt of Goods

When you receive the product, please check the item number, lot, and quantity on the delivery note. If you receive a product with a different item number or quantity than you ordered, please contact your distributor or our sales representative.

### 2. Checking Installation Guidelines

Please ensure that you understand the product characteristics and installation precautions before proceeding with the installation. Installation precautions are indicated on the shipping label of the product. (Japanese Only)

### 3. Handling and Storage

#### [At Delivery]

Since the product is a heavy item, ensure sufficient safety when handling and avoid unreasonable transportation. Improper handling may cause an accident or injury.

#### [Stored Upright]

Products must be stored upright. Avoid horizontal stacking or cross-stacking, as these can easily cause marks, gloss differences, and emboss crushing.

#### [Do Not Drop From Height]

Do not toss or drop the product from any height or angle, as you could damage the material, cause an accident or potentially injure yourself.

#### [Precautions for Storage]

Avoid storing the product in a place exposed to fire, water, humidity, or direct sunlight. Also, please do not store the product directly on the ground.

## Precautions for Wallpaper Waste Disposal

### 1. Do not incinerate wallpaper waste

Do not incinerate wallpaper waste or a catalog. Hazardous substances harmful to the human body may be released.

### 2. Industrial waste disposal

When disposing the waste of wallpaper as industrial waste, entrust it to an appropriately qualified industrial waste disposal operator.

### 3. General waste disposal

When treating a small amount of wallpaper as general waste (household waste), dispose of it in accordance with the municipal regulations.

# sangetsu | SUSTAINABLE DEVELOPMENT GOALS

Sangetsu supports the Sustainable Development Goals (SDGs).

### ■ Our Specific Initiatives



#### | Decent Work and Economic Growth

By planning and selling products that incorporate traditional Japanese materials such as washi paper, foil, and textiles, we help promote local goods and revitalize industries by preserving traditional craftsmanship.



#### | Responsible Consumption and Production

We incorporate recycled materials into our manufacturing processes to help prevent and reduce waste generation. Examples include washi paper created from joined offcuts, textile wallcoverings made with recycled yarn, and wallpapers that utilize scallop shells. In addition, we promote waste reduction by offering recyclable products and sample books.



#### | Sustainable Cities and Communities

We offer a wide range of products with diverse options in price, design, and functionality, contributing to community development through interior design. Additionally, we support sustainable urban development by designing sample book layouts that facilitate waste separation and by establishing dedicated recycling centers for sample books.



#### | Life on Land

We offer sustainable, eco-friendly products like woven wallpaper made from recycled yarn.

# Indication Symbols

 <p>Actual Product Sample</p>	<b>SGM0000</b>	<b>Sold by roll</b> (3)
	(4) Width 91.5cm ↑62.5cm ↔ 91.5cm	
	(5) Antifungal / Deodorant / Humidity Control	
		(6) *The color and texture of each hand-processed handcraft washi paper are different. For important guidelines on selection and installation, please refer to the pp.150-159.
<b>SGM0000</b> (1)	<b>NEW</b> (2)	
(1) Display Symbol	Products are categorized with alphabetical notations on the product number. <b>SGM0000</b> → TEXTURE&MATERIAL <b>SGK000</b> → Ultrasuede®	
(2) <b>NEW</b>	Depicts newly introduced products.	
(3) Sales Unit	<b>Sold by roll</b> Depicts products are sold in roll sizes. <b>Sold by sheet</b> Depicts products are sold in piece or sheet.	
(4) Width&Pattern Repeat	Displays the product width and pattern repeat.	
(5) Functional Indicators	Displays the functionalities of the product. Water Repellent / Antifungal / Humidity Control / Water-repellent for textile / Deodorant / Surface Reinforcement	
(6) Precautions	Precautions for product selection and installation.	
(7) Others	<b>Order-Made Products</b> These products are produced after an order is received.	

## Regarding Disposal of Sample Books

We kindly request that any unused sample books be disposed of through a licensed industrial waste disposal contractor.



## About the Sample Book

• The specifications of the products listed in this catalog are current as of its publication date (August 2025). Please note that they are subject to change without notice due to economic conditions or product improvements. Additionally, some products may be discontinued during the catalog's validity period due to unforeseen circumstances. We recommend confirming the latest information with your distributor or our sales office at the time of ordering.

• Please note that the actual product may differ slightly from the physical samples or the photos in the sample book. This TEXTURE & MATERIAL -XSELECT premium collection- sample book also includes items from the following collections:

- 2023-2026 FLOOR TILE
- 2023-2026 ROLL CARPET
- 2023-2026 NT700
- 2024-2028 STRINGS
- 2023-2026 DT

Please note that each sample book has a different validity period, and the listed products are subject to change or discontinuation without prior notice. For up-to-date pricing and product details, please contact our sales office.

• Please note that the test data in the sample book are based on measurements and are not guaranteed.

• Reproducing or reprinting the products or photographs in this sample book without permission is strictly prohibited.

Release Date : August 2025  
Issued by : Sangetsu Corporation

Valid Until : August 2029

\*Please note that the validity period of this sample book is subject to change without prior notice due to unforeseen circumstances.



